


## G1778 Eye/Face Wash, Wall Mounted AutoFlow™ 90° Swing-Down



Units shown in plan view

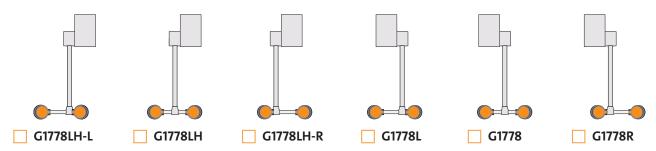

**Application:** AutoFlow™ eye/face wash for mounting on wall. Spray heads swing down from storage to operational position, activating water flow. Available in a variety of spray head configurations to minimize obstructions at a sink. Note: If unit is not installed at a sink, floor drain should be provided underneath unit to prevent accumulation of water on floor.

**Spray Head Assembly:** Two FS-Plus<sup>™</sup> spray heads. Each head has a "flip top" dust cover, internal flow control and filter to remove impurities from the water flow.

Valve: 1/2" IPS plug-type valve with PTFE coated O-ring seals. Swinging head assembly down from storage to operational position opens orifice and activates water flow. Unit remains in operation until spray head assembly is returned to storage position.

**Strainer:** Unit is furnished with in-line strainer to protect valve and spray heads from debris in water line.

**Mounting:** Valve is installed in Type 316 stainless steel housing. Mount housing on wall using anchors or other mounting hardware.

Construction: Polished chrome plated brass.

Supply: 1/2" NPT female union inlet.

Sign: ANSI-compliant identification sign.


Quality Assurance: Unit is completely assembled and water tested prior to shipment.

## **Available Options**

G6020 Thermostatic mixing valve precisely blends hot and cold water to deliver tepid water as required by ANSI Z358.1-2014. Refer to "Thermostatic Mixing Valves" section for complete technical and product selection information.



# ☐ **G1778** Eye/Face Wash, Wall Mounted AutoFlow™ 90° Swing-Down

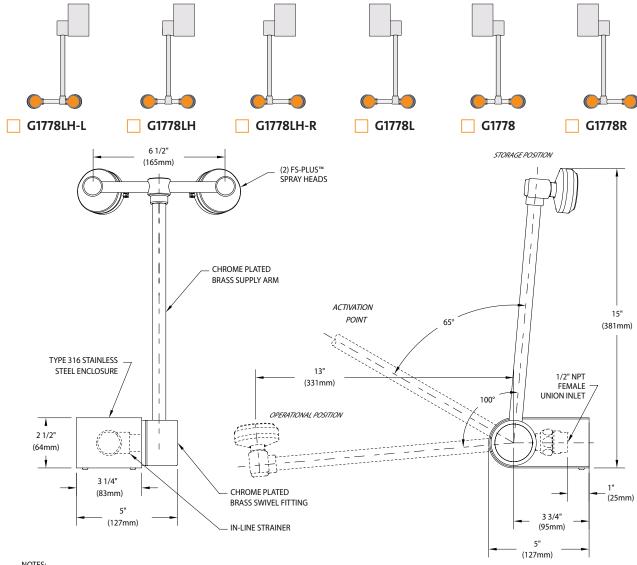


#### NOTES:

- 1. SWINGING OUTLET HEAD ASSEMBLY DOWN 100 DEGREES FROM VERTICAL TO HORIZONTAL POSITION ACTIVATES WATER FLOW.
- 2. EACH FS-PLUS™ SPRAY HEAD HAS A "FLIP-TOP" DUST COVER, INTERNAL FLOW CONTROL AND FILTER TO REMOVE IMPURITIES FROM THE WATER FLOW.
- 3. MOUNT HOUSING ON WALL USING ANCHORS OR OTHER HARDWARE.
- 4. UNIT IS FURNISHED WITH IN-LINE STRAINER TO PROTECT SPRAY HEADS AND VALVE COMPONENTS FROM DEBRIS IN WATER LINE.
- UNIT SHOULD BE INSTALLED SO THAT WATER FLOW PATTERN IS POSITIONED BETWEEN 33" AND 53" ABOVE FLOOR.
- 6. VALVE BEGINS TO OPEN AT "ACTIVATION POINT" SHOWN ABOVE.

### THIS SPACE FOR ARCHITECT/ENGINEER APPROVAL

Due to continuing product improvement, the information contained in this document is subject to change without notice. All dimensions are  $\pm$  1/4" (6mm). rev. 1017

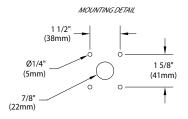

## Sign Included



